


MIKA PENDANT - 4230B


PROJECT PROJÉT

SPEC TYPE

NOTES

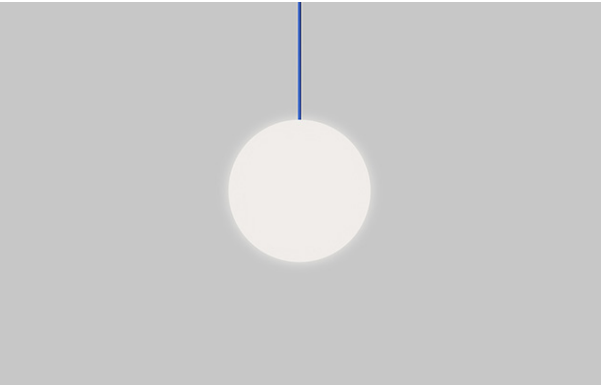


OPTION


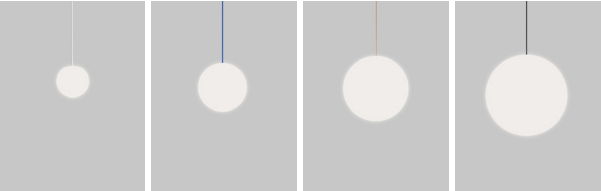


4230B-84230B-124230B-164230B-20

BRAIDED POWER CABLE FINISH FINI CÂBLE ALIMENTATION TRESSÉ

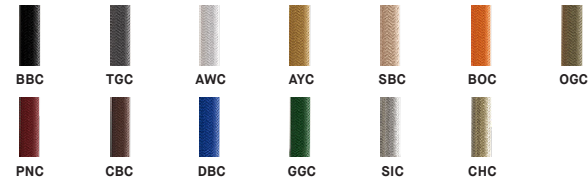

MOUNTING OPTION OPTION DE MONTAGE

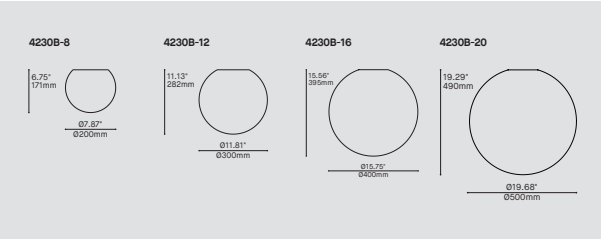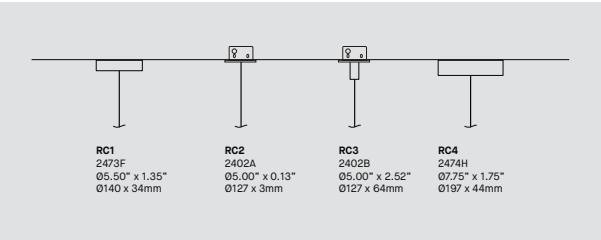

ORDERING SPECIFICATION		SPÉCIFICATION DE COMMANDE	1/2	CODE
MODEL		MODÈLE		
4230B-8	MIKA 8"			
4230B-12	MIKA 12"			
4230B-16	MIKA 16"			
4230B-20	MIKA 20"			
LIGHT SOURCE		SOURCE LUMINEUSE		
LED.LO*	LOW OUTPUT			
LED.REG	REGULAR OUTPUT			
LED.HO**	HIGHT OUTPUT			
	* NOT AVAILBE WITH 4230B-8			
	** NOT AVAILBE WITH 4230B-20			
COLOR TEMPERATURE		TEMPÉRATURE DE COULEUR		
27	2700K			
30	3000K			
35	3500K			
40*	4000K			
	* LONGER LEAD TIME MAY APPLY, PLEASE CONTACT YOUR EUREKA REPRESENTATIVE			
COLOR RENDERING INDEX (CRI)		INDICE DE RENDU DE COULEUR (IRC)		90
90	90+ CRI			
VOLTAGE		VOLTAGE		
120V	120 VOLT			
277V	277 VOLT			
CONTROL OPTION		OPTION DE CONTRÔLE		
DV	0-10V DIMMING (120V-277V)			
DP	PHASE DIMMING (120V ONLY)			
NLTAIR2*	NLIGHT AIR CONTROL GEN 2			
NLIGHT*	NLIGHT WIRED CONTROL			
	* REQUIRE RC4 CANOPY			
	* FOR EMERGENCY BATTERY WITH NLIGHT OPTIONS, PLEASE CONTACT YOUR EUREKA REPRESENTATIVE REFER TO NLIGHT GUIDE AND INSTALLATION SHEET FOR ALL REQUIREMENTS.			
EMERGENCY BATTERY		BATTERIE D'URGENCE		
EM DRIVER BOX INCLUDED. INSTALLED REMOTELY. SEE EM GUIDE FOR DETAILS				
EMB*	EMERGENCY BATTERY FOR REMOTE BOX			
	* 3981E ACCESSORY IS REQUIRED FOR THIS OPTION			
STEM OR CABLE		TIGE OU CÂBLE		
AC	CABLE, FIELD ADJUSTABLE			
S10*	3/8" (10MM) STEM, NOT FIELD ADJUSTABLE			
	*NOT AVAILBE WITH RC2 & RC3			
STEM OR CABLE LENGTH		LONGUEUR DE TIGE OU CÂBLE		
36	36" STEM (STD LENGTH)			
60	60" CABLE (STD LENGTH)			
**	CUSTOM STEM OR CABLE LENGTH (PLEASE SPECIFY)			
	FOR OVERALL LENGTH PLEASE CONTACT YOUR EUREKA REPRESENTATIVE.			
MOUNTING OPTIONS		OPTIONS DE MONTAGE		
RC1	SCREWLESS CANOPY 05.50" X 1.35" (2473F)			
RC2*	SCREWLESS 05.00" X 0.13"H. CANOPY (2402A)			
RC3**	SCREWLESS 05.00" X 2.52"H. CANOPY (2402B)			
RC4	NLIGHT SCREWLESS CANOPY 07.75" X 1.30" (2474H)			
	*REQUIRE A DEEP JBOX (3983), NOT AVAILBE WITH STEM (S10) & WITH 4230-20			
	**REQUIRE A DEEP JBOX (3983) & NOT AVAILBE WITH STEM (S10)			
CANOPY FINISH		FINI PAVILLON		
BLKE	BLACK FINE TEXTURE	HGE*	HUNTER GREEN	
WHE	WHITE FINE TEXTURE	LNE*	LUNAR GREY	
AYE*	APRICOT YELLOW	NBE*	NAVY BLUE	
BRE*	BRICK RED	SBE*	SAND BEIGE	
CBE*	CHOCOLATE BROWN	SGE*	SAGE GREY	
CPE*	CLAY PINK	STE*	SUMMER TEAL	
DBE*	DYNAMIC BLUE	SIM*	SILVER METALLIC	
GGE*	GRASS GREEN	CHM*	CHAMPAGNE METALIC	
	* LONGER LEAD TIME MAY APPLY, PLEASE CONTACT YOUR EUREKA REPRESENTATIVE			
POWER CORD OR STEM FINISH		FINI CÂBLE D'ALIMENTATION OU TIGE		
BLKE	BLACK STEM	BOC**	BLOOD ORANGE CORD	
WHE	WHITE STEM	OGC**	OLIVE GREEN CORD	
MATCH*	STEM COLOR MATCH WITH CANOPY	PNC**	PINOT NOIR CORD	
BBC*	BASIC BLACK CORD	CBC**	CHOCOLATE BROWN CORD	
AWC*	ARTIC WHITE CORD	DBC**	DYNAMIC BLUE CORD	
TGC**	TITANIUM GRAY CORD	GGC**	GRASS GREEN CORD	
AYC**	APRICOT YELLOW CORD	SIC**	SILVER CORD	
SBC**	SAND BEIGE CORD	CHC**	CHAMPAGNE CORD	
	* LONGER LEAD TIME MAY APPLY, PLEASE CONTACT YOUR EUREKA REPRESENTATIVE			
	**NOT AVAILBE ON 4230-20			




DIFFUSER FINISH FINI DIFFUSEUR		WH
WH	WHITE	
ACCESSORY ACCESSOIRE		
ALL ACCESSORIES ARE AVAILABLE FOR ADVANCE SHIPPING		
3983	DEEP JUNCTION BOX (PROVIDED FOR RC2 & RC3)	
ACCESSORY EMERGENCY BATTERY ACCESSOIRE BATTERIE D'URGENCE		
3981EA	ELECTRICAL BOX FOR EMB EMERGENCY BATTERY	

PRODUCT CHARACTERISTICS CARACTÉRISTIQUES DU PRODUIT



DESIGN:	A classic round frosted globe with uniform illumination available in 8", 12", 16" and 20" diameters.
INSTALLATION:	Mika is easily installed with minimal hardware. An adjustable fabric power cable and multiple canopy options provide on-site flexibility.
LIGHT SOURCE:	High-performance LED module mounted on a custom-designed aluminum heatsink, delivering up to 4,850 lumens. Various control options and emergency options are also available.
DIFFUSER:	Translucent white diffuser made from impact-resistant rotomolded MDPE.

MIKA PENDANT - 4230B

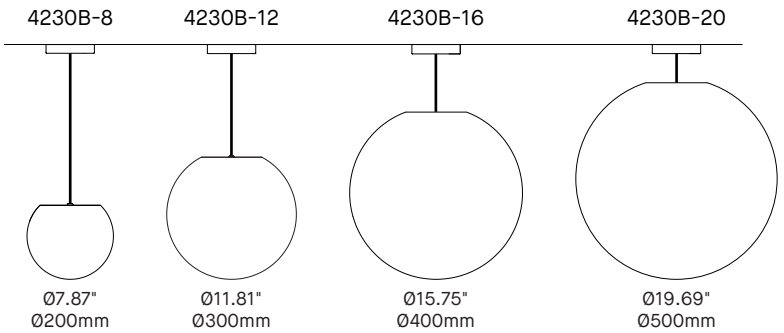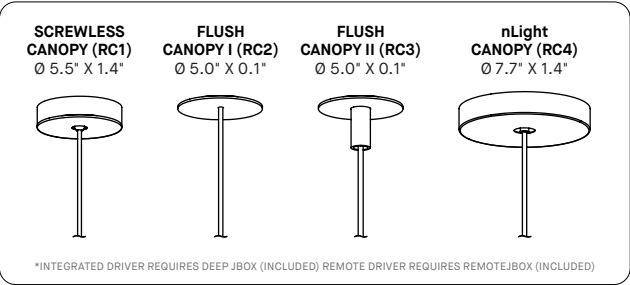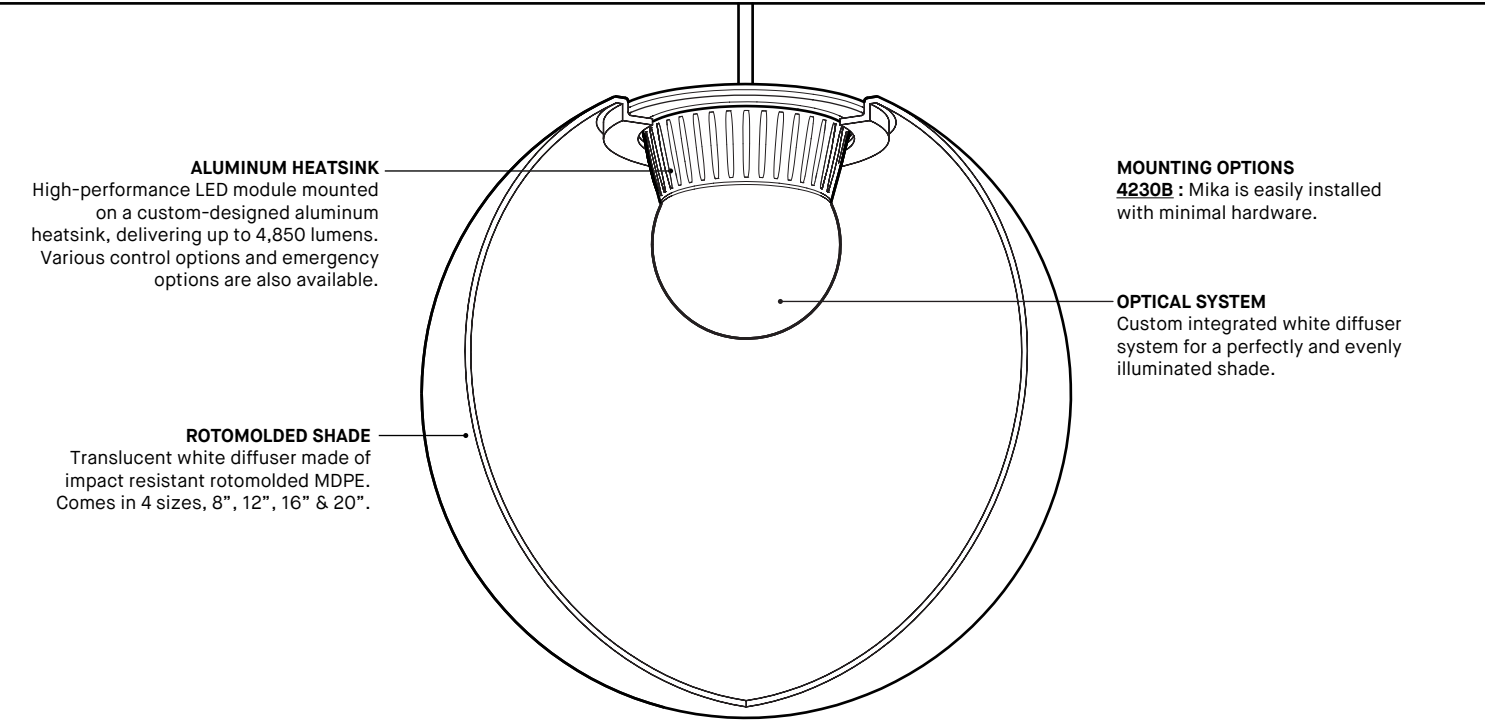


PRODUCT SPECIFICATION	4230B-8	4230B-12	4230B-16	4230B-20
PERFORMANCE	REG — HO	LOW — REG — HO	LOW — REG — HO	LOW - REG
SYSTEM WATTAGE	4.8 — 6.7 W	7.1 — 10.8 — 15.6 W	15.6 — 23 — 33.9 W	24.8 — 38.5 W
DELIVERED LUMENS (3500K)	686 — 957 LM	1141 — 1672 — 2350 LM	2079 — 3064 — 4293 LM	3312 — 4851 LM
EFFICACY	143 — 143 LM/W	161 — 155 — 151 LM/W	133 — 133 — 127 LM/W	134 — 126 LM/W
OTHER INFORMATION				
WEIGHT	2.2LBS / 1.0KG	2.3LBS / 1KG	4.9LBS / 2.2KG	6.7LBS / 3.0KG
L70 (LUMEN MAINTENANCE)	> 55 000 HRS	> 55 000 HRS	> 55 000 HRS	> 55 000 HRS
WELL & LEED STANDARD REQUIREMENTS				
MAX. LUMINANCE 45°-90° OF NADIR	1817 — 2535 CD/M²	1137 — 1666 — 2340 CD/M²	1178 — 1736 — 2432 CD/M²	1148 — 1681 CD/M²
LIGHT QUALITY	R9 > 50			
FLICKERING TOLERANCE	LOW FLICKER, COMPLIANT TO CALIFORNIA TITLE 24			

EFFICACY MULTIPLIERS

CRI	CCT	FACTOR
90+	4000K	1.03
90+	3500K	1.00
90+	3000K	0.98
90+	2700K	0.93

LIGHT DISTRIBUTION



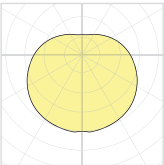


4230B



Visit our website for warranty terms and conditions.

MIKA PENDANT - 4230B

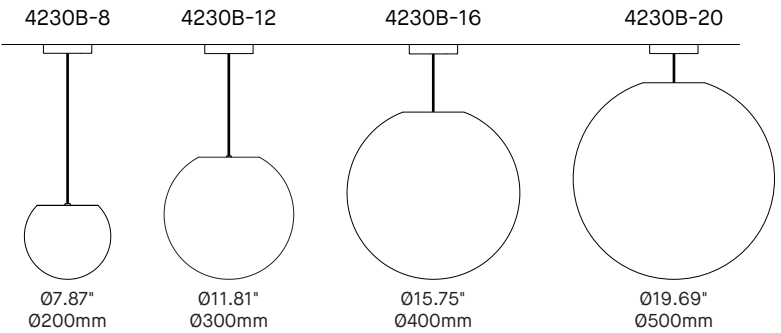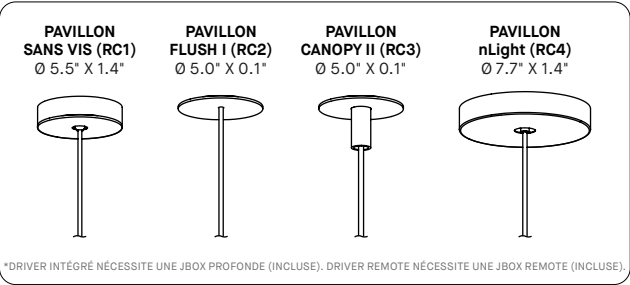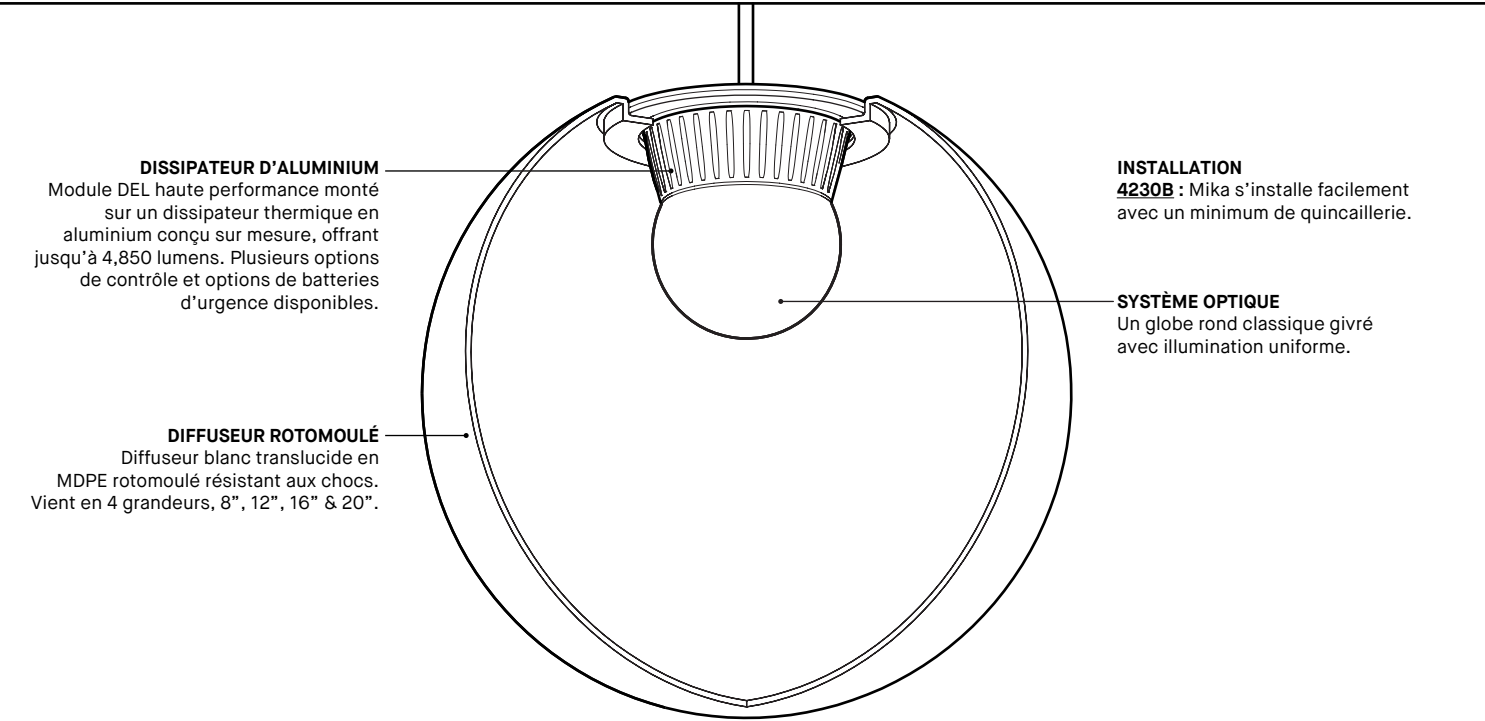


SPÉCIFICATION PRODUIT	4230B-8	4230B-12	4230B-16	4230B-20
PERFORMANCE	REG — HO	LOW — REG — HO	LOW — REG — HO	LOW - REG
PUISSANCE TOTALE	4.8 — 6.7 W	7.1 — 10.8 — 15.6 W	15.6 — 23 — 33.9 W	24.8 — 38.5 W
LUMENS RÉELS (3500K)	686 — 957 LM	1141 — 1672 — 2349 LM	2079 — 3064 — 4293 LM	3312 — 4851 LM
EFFICACITÉ	143 — 143 LM/W	161 — 155 — 151 LM/W	133 — 133 — 127 LM/W	134 — 126 LM/W
AUTRES INFORMATIONS				
POIDS	2.2LBS / 1.0KG	2.3LBS / 1KG	4.9LBS / 2.2KG	6.7LBS / 3.0KG
L70 (MAINTENANCE DE LA LUMIÈRE)	> 55 000 HRS	> 55 000 HRS	> 55 000 HRS	> 55 000 HRS
CRITÈRES DE CERTIFICATION WELL & LEED				
MAX. LUMINANCE 45°-90° NADIR	1817 — 2535 CD/M²	1137 — 1666 — 2340 CD/M²	1178 — 1736 — 2432 CD/M²	1148 — 1681 CD/M²
QUALITÉ DE LA LUMIÈRE	R9 > 50			
TOLÉRANCE DE CLIGNOTEMENTS	PEU DE CLIGNOTEMENT (CONFORME À CALIFORNIA TITLE 24)			

FACTEUR D'EFFICACITÉ

IRC	CCT	FACTEUR
90+	4000K	1.03
90+	3500K	1.00
90+	3000K	0.98
90+	2700K	0.93

DISTRIBUTION LUMINEUSE

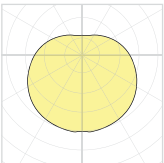

4230B



Visitez notre site Web pour les termes et conditions.

JUNCTION BOX 3981E


PROJECT	PROJET
SPEC TYPE	
NOTES	



ORDERING SPECIFICATION SPÉCIFICATION DE COMMANDE		CODE
MODEL MODÈLE		
3981EA	APPROX. 10W MAX EMERGENCY BACKUP POWER	
3981EB	APPROX. 5W MAX EMERGENCY BACKUP POWER	


PRODUCT CHARACTERISTICS CARACTÉRISTIQUES DU PRODUIT

DESIGN:	Remote junction box and cover with an emergency backup driver. Features matching wires and labelling to simplify installation. Is required to complete luminaires ordered with EMB remote emergency box option (selected models, refer to specification sheets. Other models possible upon request). Available in several power outputs, selected according to the luminaire power.
STRUCTURE:	Die-stamped 16 gauge grey painted steel. Knockouts on all 4 sides from 1/2" to 1-1/4".
CERTIFIED:	c-CSA-us, UL, RoHS, NEMA Type 1, FCC
CONCEPTION:	Boîte de jonction à distance avec couvercle avec batterie d'urgence intégré. Contient des fils avec couleurs et étiquetage pour simplifier l'installation. Requis pour compléter un luminaire commandée avec l'option EMB (voir pages de spécification pour produits avec l'option EMB. Autres produits possibles sur demande). Disponible en plusieurs puissances, sélectionnées en fonction du luminaire.
STRUCTURE:	Acier plié de 16 jauge peinturé gris avec coins soudés. Débouchures sur 4 côtés 1/2" à 1-1/4".
CERTIFIÉ:	c-CSA-us, UL, RoHS, NEMA Type 1, FCC

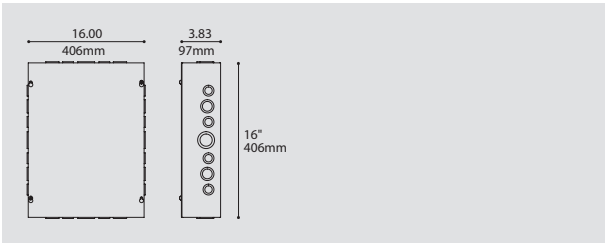


INSTALLATION SUMMARY SOMMAIRE D'INSTALLATION

STEP 1 ÉTAPE 1

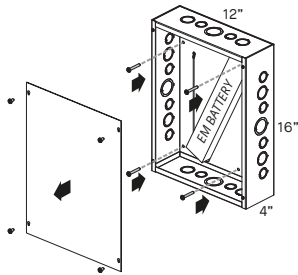


Remove cover and fasten box remotely to a wall or a ceiling.
Enlever le couvercle et fixer la boîte à distance sur un mur ou un plafond.

STEP 2 ÉTAPE 2

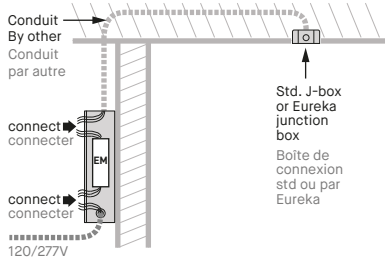

Run conduit from box to junction box of luminaire. Conduit must have a minimum of 5 wires with wire gauge and maximum distance as per EM driver distance chart. Connect EM driver to conduit wires and ac branch circuit. Faites passer le conduit de la boîte EM à la boîte de connexion du luminaire. Consulter le tableau de "distance maximale" disponible dans la feuille d'installation. Branchez la batterie EM avec les fils du conduit ainsi que la ligne 120V ou 277V.

STEP 3 ÉTAPE 3

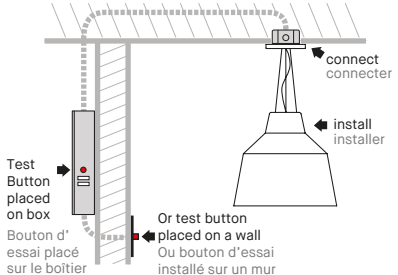

Install luminaire & connect its wires to conduit. Install test button on wall or box (wall plate not supplied). Installer le luminaire & connecter les fils au conduit. Installer le bouton d'essai sur le mur ou boîtier (plaque murale non fournie).

REFER ALSO TO INSTALLATION DRAWING AND EM GUIDE FOR MORE INFORMATION.
CONSULTEZ LE DESSIN D'INSTALLATION ET LE GUIDE EM POUR PLUS D'INFORMATIONS.

3981E REMOTE EMERGENCY BOX KIT - IOTA EM DRIVER

SAFETY GUIDELINES :

- > Follow safety instructions and guidelines of EM battery/driver manufacturer for the specific model.
- > Install by qualified personnel in accordance with the National Electrical Code and local regulations.
- > Turn off power supply before installation or servicing the fixture.


EMB LOCATION :

- > The 3981E box connects to a luminaire ordered with an EMB option (which has specific EM WIRING).
- > Consult our chart for maximum remote distance of EM battery to luminaire leds.
- > Establish desired location for EMB box & EM test button on box or on a wall.

EM Remote Distance Chart
Maximum distance EM battery to Luminaire LEDs (Ft)

MAX EM BOX DISTANCE (Ft)		CONDUIT WIRE GAUGE (AWG)						
		10	12	14	16	18	20	22
LUMINAIRE	200mA	1043'	651'	413'	259'	163'	103'	65'
DRIVER	350mA	596'	372'	236'	148'	93'	59'	37'
OUTPUT	500mA	417'	261'	165'	104'	65'	41'	26'
CURRENT*	700mA	298'	186'	118'	74'	47'	29'	18'
(Amps)	1000mA	209'	130'	83'	52'	33'	21'	13'
*Contact Eureka	1400mA	149'	93'	59'	37'	23'	15'	9'
	2000mA	104'	65'	41'	26'	16'	10'	6'
	3000mA	70'	43'	28'	17'	11'	7'	4'

EMB PLACEMENT EXAMPLES :

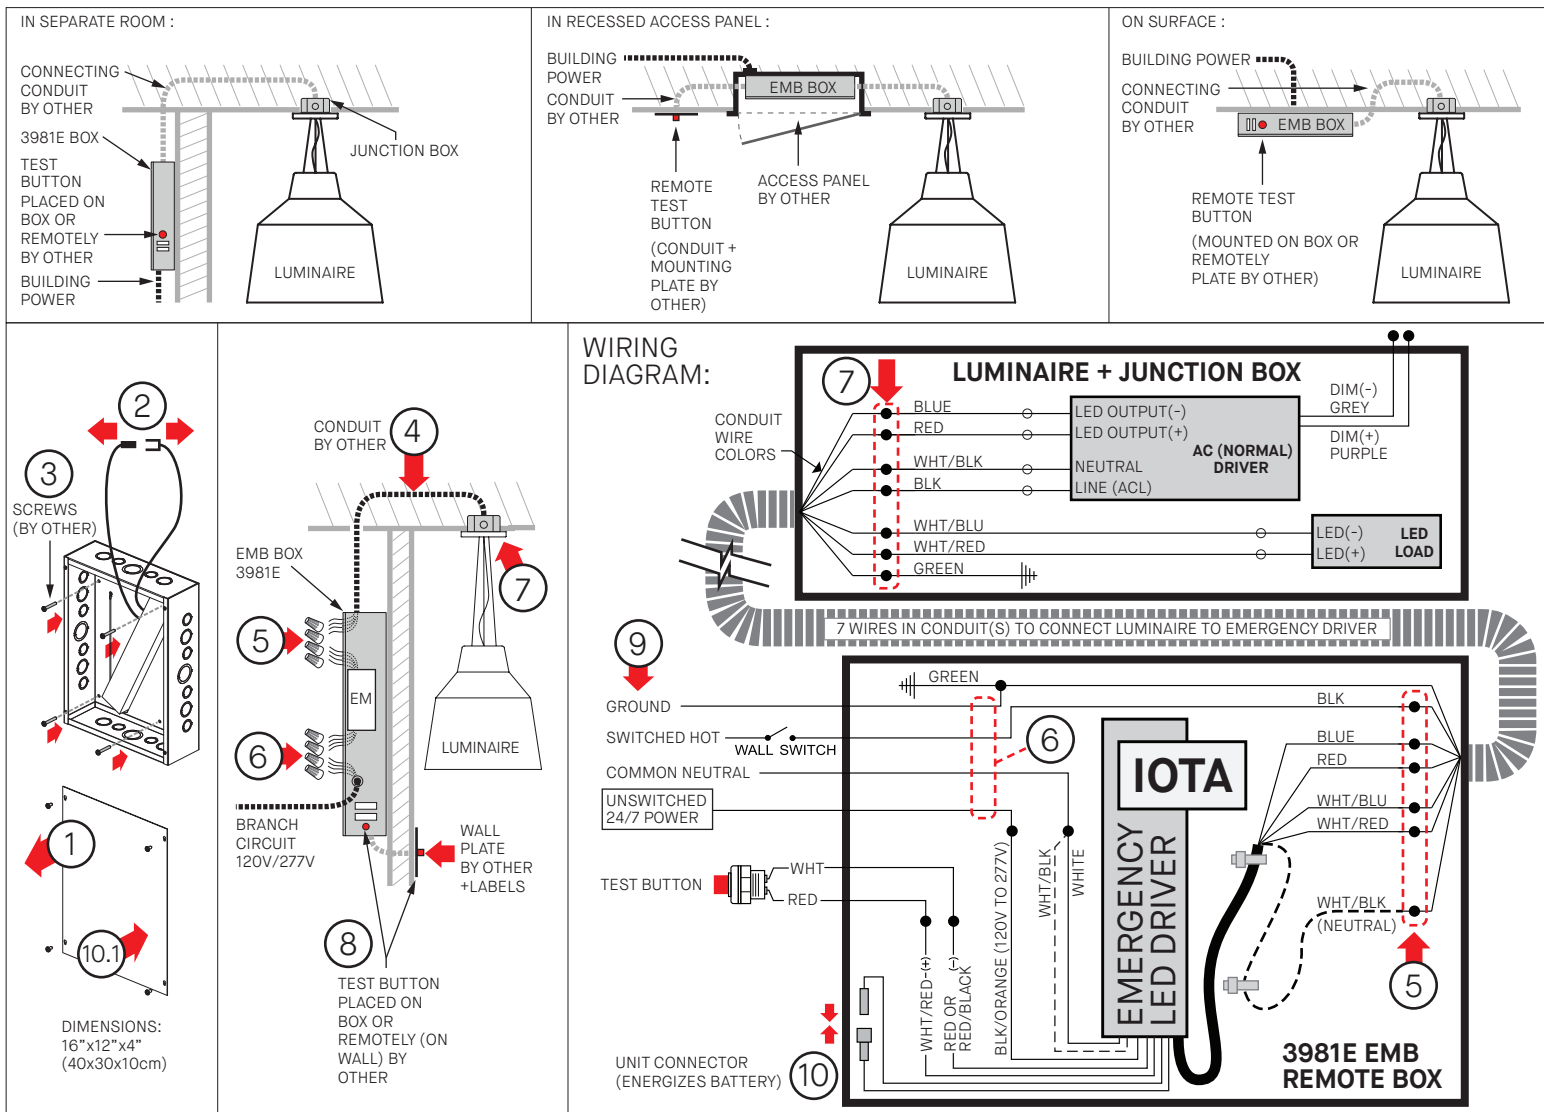

INSTALLATION

- 1 - REMOVE BOX COVER.
- 2 - IF CONNECTED, DISCONNECT THE EM BATTERY 'UNIT CONNECTOR' (WHITE).
- 3 - SCREW BOX TO MOUNTING SURFACE (SCREWS NOT SUPPLIED)
- 4 - RUN CONDUIT FROM EMB BOX TO ELECTRICAL JUNCTION BOX OF LUMINAIRE. CONDUIT MUST HAVE MIN. 7 WIRES AND WIRE GAUGE AS PER DISTANCE CHART.
- 5 - CONNECT CONDUIT WIRES TO EM BATTERY AS PER WIRING DIAGRAM.
CAREFULLY NOTE WHICH WIRE COLORS ARE CONNECTED TOGETHER ON EACH END.
- 6 - CONNECT BATTERY TO AC BRANCH CIRCUIT : GROUND, NEUTRAL, 24/7 UNSWITCHED LINE (HOT) AND SWITCHED LINE (ON SAME CIRCUIT AS LUMINAIRE ON/OFF CONTROL).
- 7 - INSTALL SPECIFIC EM LUMINAIRE, CONNECT WIRES TO CONDUIT USING THE SAME CORRESPONDING COLORS NOTED AT THE EM BATTERY-CONDUIT CONNECTION.
- 8 - INSTALL EM BATTERY TEST BUTTON IN DESIRED LOCATION. WALL PLATE BY OTHER. ADD LABELS "PUSH TO TEST" & CHARGING INDICATOR LIGHT".

- 9 - SWITCH ON AC POWER.
- 10 - JOIN THE EM BATTERY CONVERTOR CONNECTOR. 10.1 - INSTALL BOX COVER.
- 11 - IF EMB IS FAR FROM THE LUMINAIRE, IDENTIFY TO WHICH LUMINAIRE IT IS CONNECTED.

AT THIS POINT POWER SHOULD BE CONNECTED TO BOTH THE AC DRIVER AND THE EMERGENCY DRIVER & TEST/CHARGE LIGHT SHOULD ILLUMINATE, INDICATING BATTERY IS CHARGING.

TESTING & EM DRIVER/BATTERY MAINTENANCE:

CONDUCT A SHORT-TERM DISCHARGE TEST AFTER THE EMERGENCY DRIVER HAS BEEN CHARGED FOR MINIMUM ONE HOUR. CHARGE FOR 24 HOURS BEFORE CONDUCTING A LONG-TERM DISCHARGE TEST.

FOLLOW GUIDELINES FROM THE EM DRIVER/BATTERY MANUFACTURER INSTRUCTIONS FOR THE REQUIRED PERIODIC TESTING AND MAINTENANCE GUIDELINES.



INSTALLATION

3981E BOÎTE D'URGENCE À DISTANCE - DRIVER EM IOTA

DIRECTIVES DE SÉCURITÉ:

- > Suivre les consignes de sécurité et les directives d'installation du fabricant de la batterie d'urgence.
- > Installer par du personnel qualifié conformément au code électrique national et local.
- > Fermer l'alimentation avant l'installation ou l'entretien.

EMPLACEMENT :



- > Cette boîte 3981E se connecte à un luminaire commandé avec l'option EMB (qui a du filage spécifique).
- > Consulter le tableau pour la distance maximale de la batterie d'urgence aux DELs du luminaire.
- > Déterminer l'emplacement souhaité pour la boîte EMB et le bouton de test d'urgence.

Charte de distance d'installation EM

Distance maximale entre Batterie d'urgence et DELs du luminaire (Pi)

DISTANCE MAX D'INSTALLATION (Pi)		GAUGE DE FILS DU CONDUIT (AWG)						
		10	12	14	16	18	20	22
COURANT ALIMENTATION DU LUMINAIRE* (Amp)	200mA	1043'	651'	413'	259'	163'	103'	65'
	350mA	596'	372'	236'	148'	93'	59'	37'
	500mA	417'	261'	165'	104'	65'	41'	26'
	700mA	298'	186'	118'	74'	47'	29'	18'
*Contacter Eureka	1000mA	209'	130'	83'	52'	33'	21'	13'
	1400mA	149'	93'	59'	37'	23'	15'	9'
	2000mA	104'	65'	41'	26'	16'	10'	6'
	3000mA	70'	43'	28'	17'	11'	7'	4'

EXEMPLES D'EMPLACEMENT:

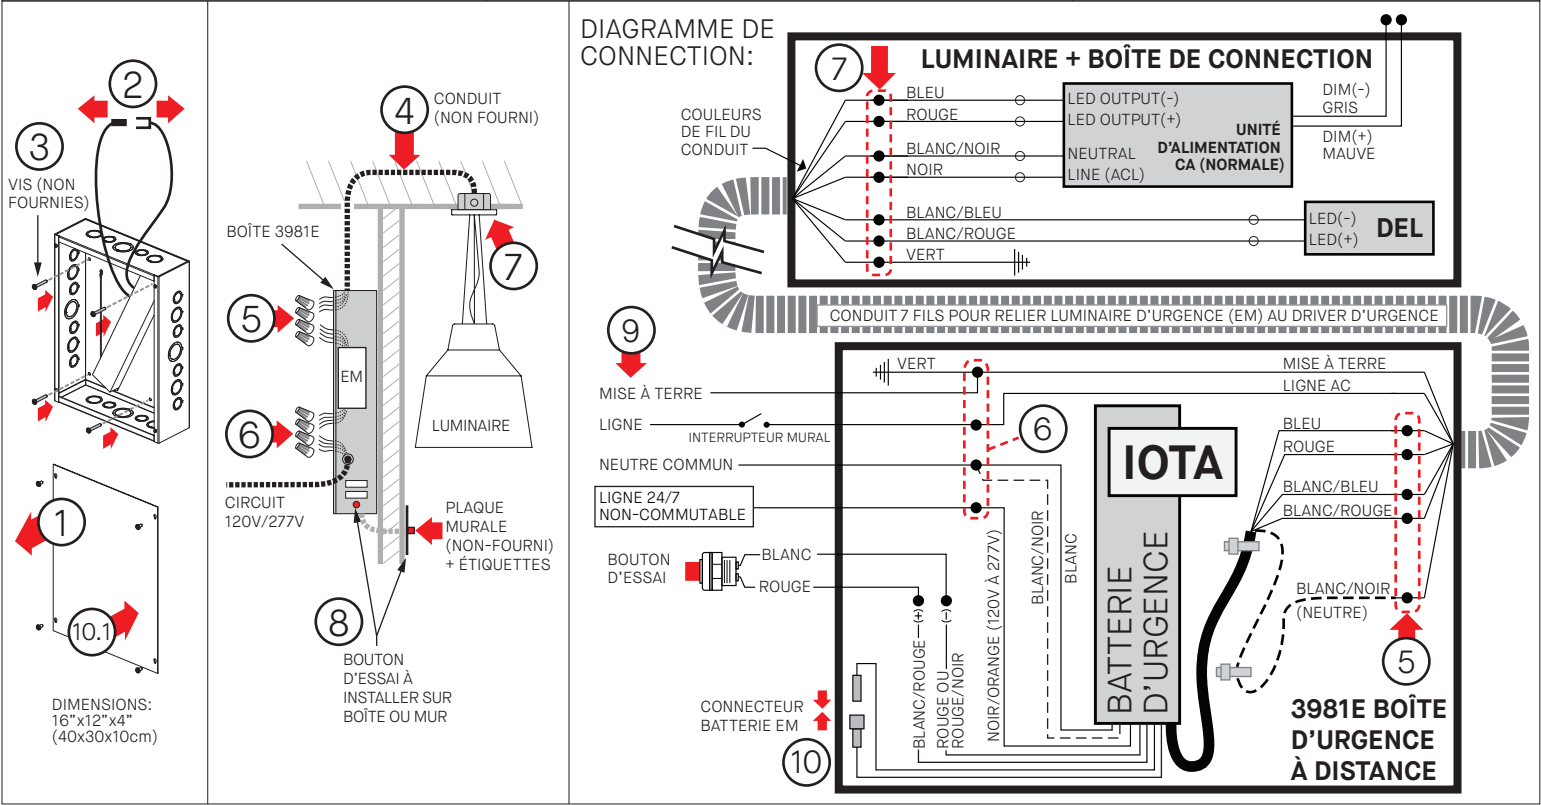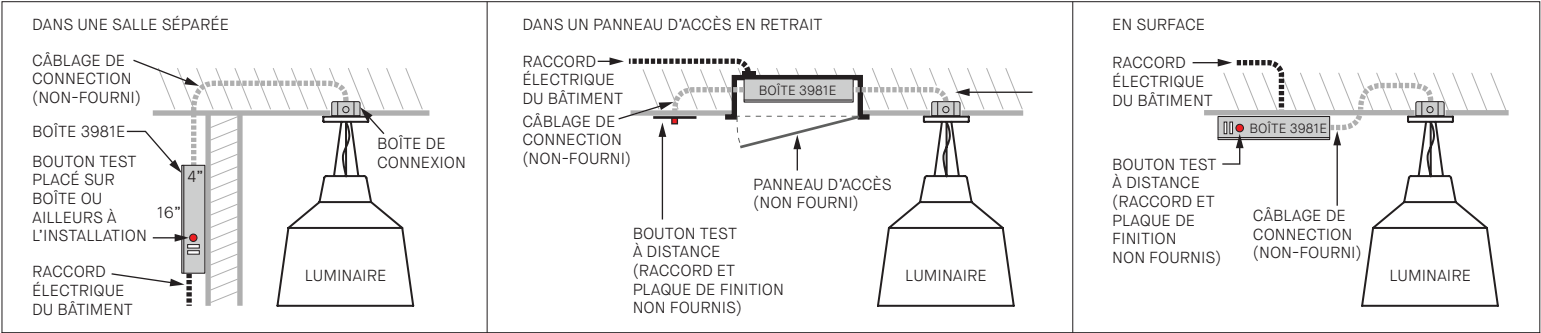

INSTALLATION

- 1 - DÉVISSER LE COUVERCLE.
- 2 - DÉCONNECTER LE CONNECTEUR BLANC DE BATTERIE EM (UNIT CONNECTOR).
- 3 - FIXER LA BOÎTE SUR LE MUR/PALAFOND AVEC VIS (NON FOURNIES)
- 4 - PASSER DU CONDUIT DU EMB VERS LA BOÎTE DE CONNEXION ÉLECTRIQUE DE LUMINAIRE. LE CONDUIT DOIT AVOIR 7 FILS AVEC GAUGE DE FIL SELON CHARTRE DE DISTANCE.
- 5 - CONNECTER LES FILS DE CONDUIT À LA BATTERIE EM SELON LE SCHÉMA DE CÂBLAGE.
- 6 - CONNECTER LA BATTERIE AU CIRCUIT DE DÉRIVATION AC (FILS: MISE A LA TERRE, NEUTRE, LIGNE & LIGNE SANS INTERRUPTEUR 24H/7* (*DOIT ETRE LE MEME CIRCUIT QUE LE CONTROLE DU LUMINAIRE)).
- 7 - INSTALLER LUMINAIRE SPÉCIFIQUE EM, CONNECTER LES FILS AU CONDUIT AVEC MÊMES COULEURS CORRESPONDANTES DE LA BATTERIE EM AUX FILS DE CONDUIT.
- 8 - INSTALLEZ LE BOUTON D'ESSAI DE BATTERIE EM DANS L'ENDROIT SOUHAITÉ (PLAQUE MURALE PAR AUTRE). COLLER ÉTIQUETTES "PUSH TO TEST" & CHARGING INDICATOR LIGHT".

- 9 - ALIMENTER LE CIRCUIT AC.
- 10 - JOINDRE CONNECTEUR BLANC DE BATTERIE EM. 10.1 - INSTALLER COUVERCLE DE BOITE.
- 11 - SI LE EMB EST LOIN DU LUMINAIRE, IDENTIFIER À QUEL LUMINAIRE IL EST CONNECTÉ.

A CE STADE, L'ALIMENTATION DEVRAIT ETRE CONNECTÉE À L'UNITÉ D'ALIMENTATION AC ET LA BATTERIE D'URGENCE ET LA LUMIERE DE TEST/CHARGE S'ILLUMINE, INDIQUANT QUE LA BATTERIE SE CHARGE.

ESSAIS & ENTRETIEN DE LA BATTERIE:

FAITES UN TEST DE DÉCHARGE À COURT TERME APRÈS AVOIR CHARGÉ LA BATTERIE D'URGENCE AU MINIMUM UNE HEURE. CHARGEZ 24 HEURES AVANT D'EFFECTUER UN TEST DE DÉCHARGE À LONG TERME.

SUIVRE LES DIRECTIVES DU FABRICANT DE BATTERIE / CONDUCTEUR EM (SITE WEB) POUR LES DIRECTIVES PÉRIODIQUES REQUISES EN MATIÈRE DE TEST ET D'ENTRETIEN.