



INSTALLATION MAINTENANCE


Wall Sconce Applique murale

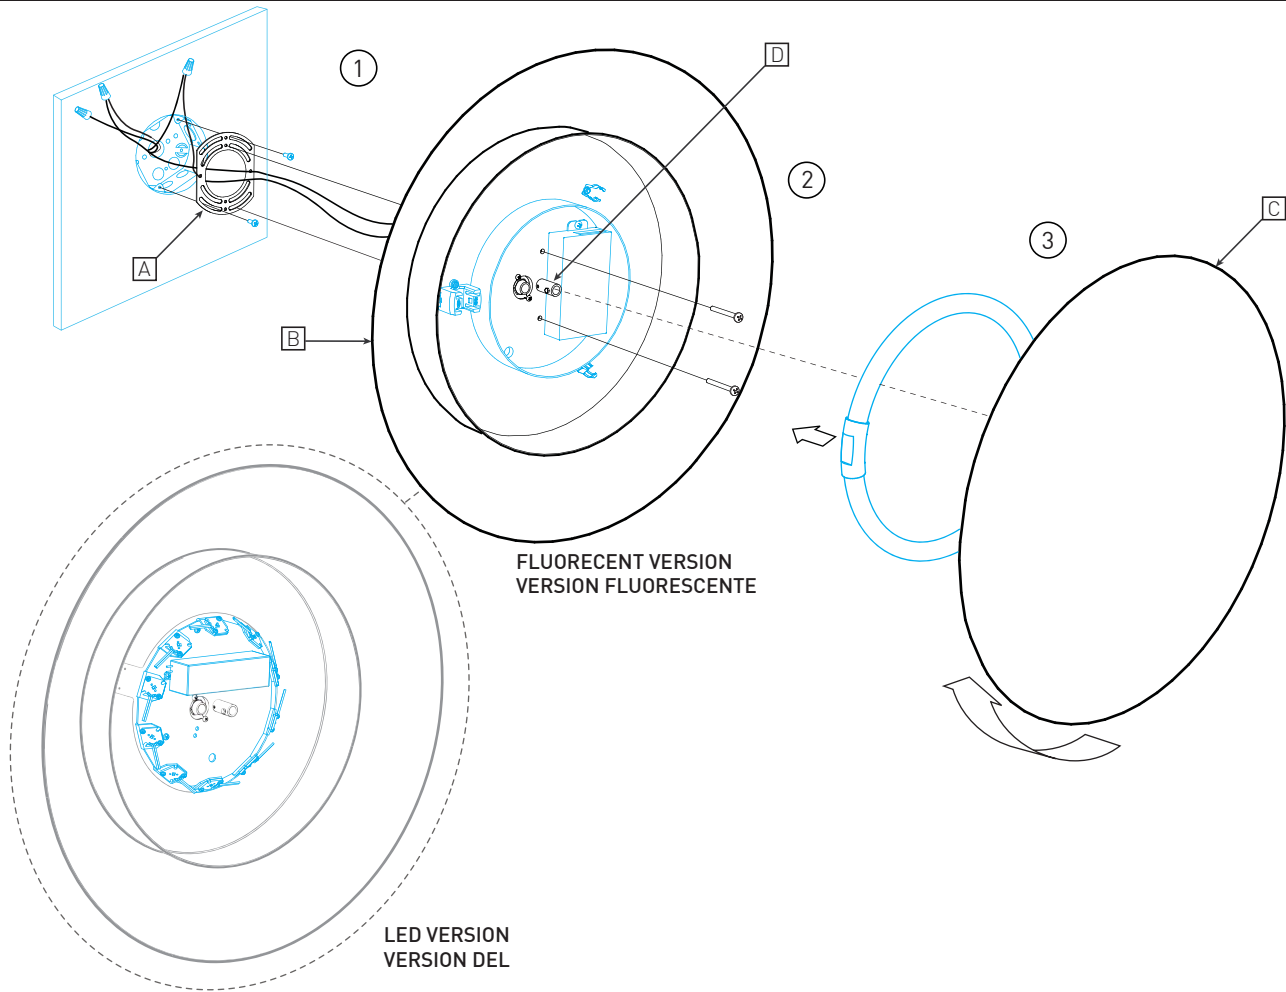

BULBS AMPOULES

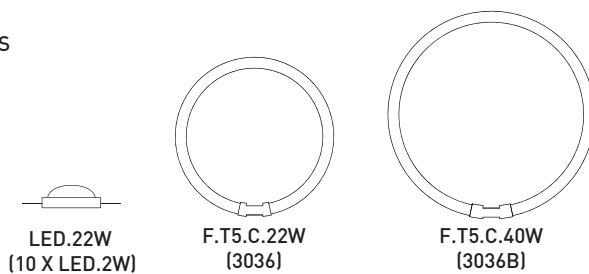

SHADES ABATS-JOUR

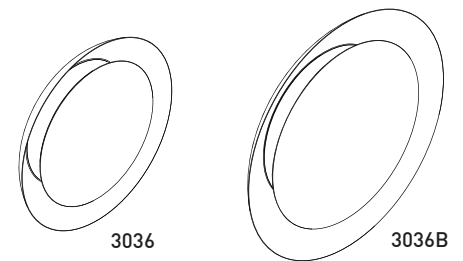

INSTALLATION

- 1 - INSTALL THE UNIVERSAL PLATE [A], AND MAKE THE ELECTRICAL CONNECTIONS. (WIRE NUTS AND SCREWS NOT SUPPLIED).
- 2 - INSTALL THE MOUNTING PLATE [B] TO THE UNIVERSAL PLATE [A] USING THE SUPPLIED SCREWS.
- 3 - INSERT THE BULB (NOT SUPPLIED/FLUORESCENT VERSION ONLY) AND SCREW THE METAL SHADE [C] TO THE FIXTURE BY ROTATING IT CLOCKWISE ONTO THE CENTRAL COUPLING [D].

MAINTENANCE

- 4 - UNSCREW THE METAL SHADE [C] BY ROTATING IT COUNTER CLOCKWISE.
- 5 - INSERT THE BULB (NOT SUPPLIED) AND REINSTALL THE METAL SHADE [C].

INSTALLATION

- 1 - INSTALLER LA PLAQUE UNIVERSELLE [A] ET FAIRE LA CONNEXION DES FILS. (MARRETTES ET VIS NON INCLUSES).
- 2 - FIXER LA PLAQUE DE MONTAGE [B] À LA PLAQUE UNIVERSELLE [A] À L'AIDE DES VIS FOURNIES.
- 3 - INSÉRER L'AMPOULE (NON-FOURNIE/VERSION FLUORESCENTE SEULEMENT) ET VISSER L'ABAT-JOUR EN MÉTAL [C] SUR LE COUPLING CENTRAL [D] GRÂCE À UNE ROTATION HORAIRE.

MAINTENANCE

- 4 - DÉVISSER L'ABAT-JOUR EN MÉTAL [C] GRÂCE À UNE ROTATION ANTI-HORAIRE.
- 5 - INSÉRER L'AMPOULE (NON-FOURNIE/VERSION FLUORESCENTE SEULEMENT) ET RÉINSTALLER L'ABAT-JOUR EN MÉTAL [C].



225 de Liège Ouest, Suite #200
Montréal (QC), Canada H2P 1H4
Tel : 514.385.3515 Fax : 514.385.4169
www.eurekalighting.com



3036 | 3036B
Spin