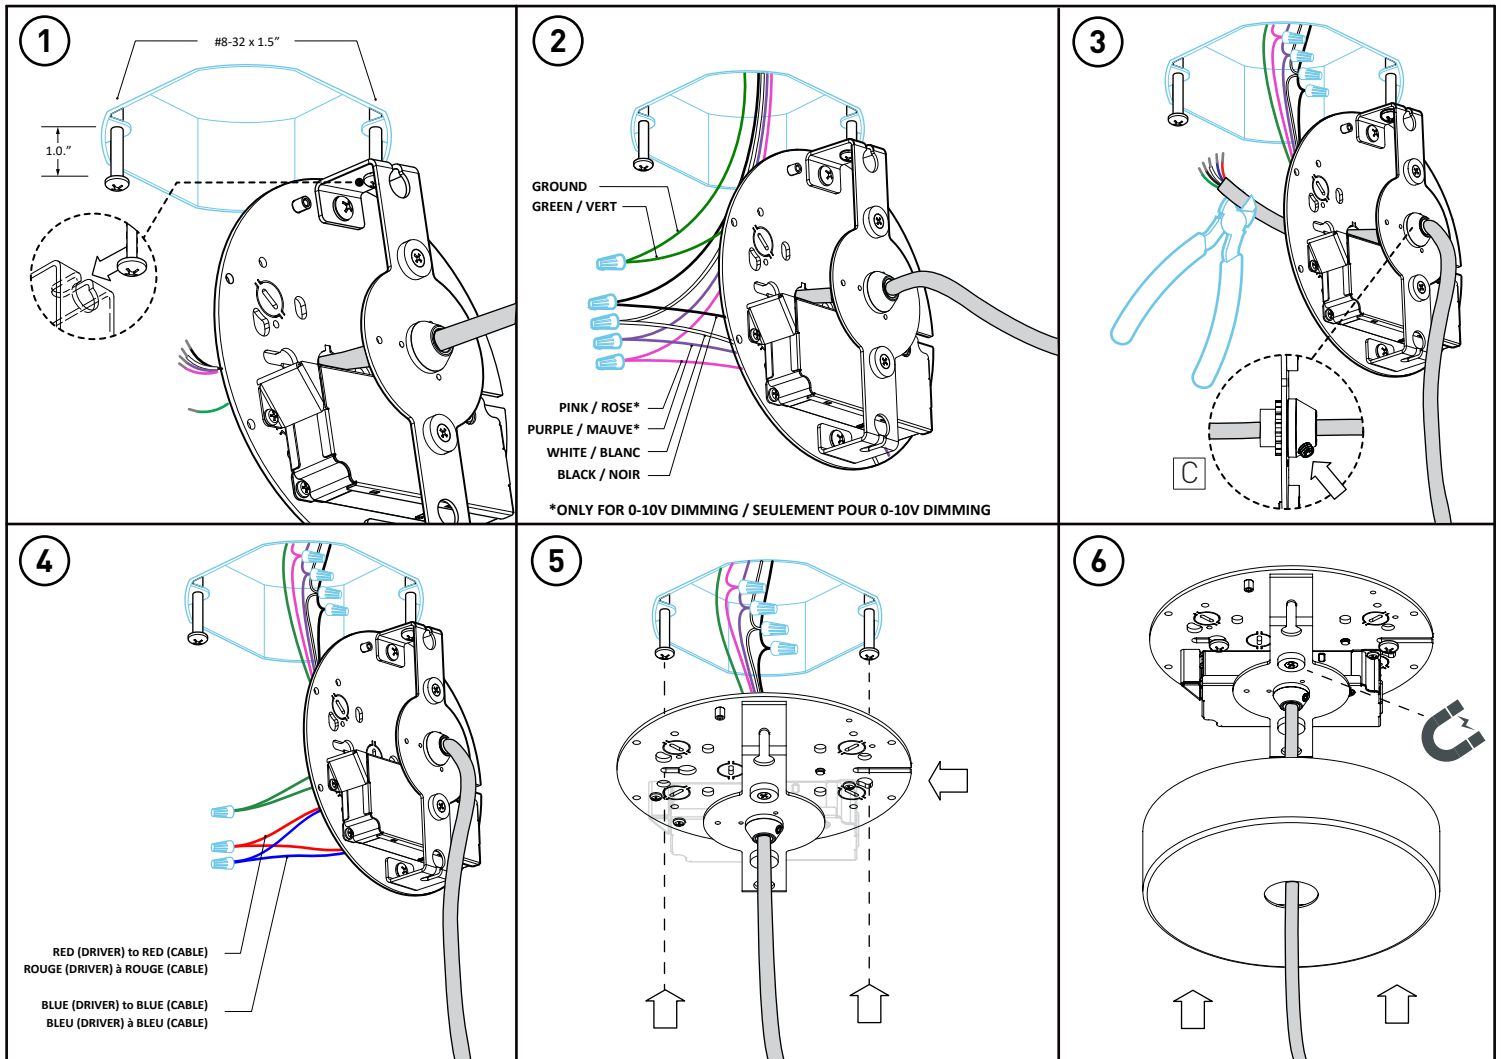


FIGURE 4150

RC1



INSTALLATION

1- INSERT BOTH #8-32 SCREWS LEAVING A 1.0" DISTANCE BETWEEN THE SCREW HEAD AND THE JUNCTION BOX. HANG THE MOUNTING PLATE [B] ON ONE OF THE SCREW HEADS USING THE SLOT IN THE FOLDED FLAP.

2- MAKE CONNECTIONS:

*PURPLE WIRE (0-10V DIM +)	= PURPLE WIRE
*GREY WIRE (0-10V DIM -)	= GREY WIRE
BLACK WIRE (LINE)	= BLACK WIRE
WHITE WIRE (NEUTRAL)	= WHITE WIRE
GREEN WIRE	= GROUND

* ONLY FOR 0-10V DIMMING, OTHERWISE CAP WIRES

3- ADJUST CABLE BY LOOSENING THE SCREW ON THE STRAIN RELIEF [C] AND SLIDING THE CABLE TO DESIRED LENGTH, TIGHTEN BACK THE SCREW TO SECURE THE FIXTURE, CUT EXCESS CABLE.

4- MAKE CONNECTIONS:

GREEN WIRE (GROUND)	= GROUND
UPLIGHT: BLUE WIRE	= BLUE WIRE (-)
UPLIGHT: RED WIRE	= RED WIRE (+)

5- DETACH MOUNTING PLATE FROM KEYHOLE HOLDER AND FIX IN PLACE USING THE TWO KEYHOLE SLOTS, TIGHTEN SCREWS.

6- LIFT CANOPY IN POSITION

INSTALLATION

1- INSÉRER LES DEUX VIS #8-32 EN LAISSANT UN ESPACE DE 1.0" ENTRE LES TÊTES DE VIS ET LA BOÎTE DE JONCTION. SUSPENDRE LA PLAQUE DE MONTAGE [B] SUR L'UNE DES VIS EN UTILISANT L'OUVERTURE DE L'AILETTE.

2- FAIRE LES CONNEXIONS:

*FIL MAUVE (0-10V DIM +)	= FIL MAUVE
*FIL GRIS (0-10V DIM -)	= FIL GRIS
FIL NOIR (LIGNE)	= FIL NOIR
FIL BLANC (NEUTRE)	= FIL BLANC
FIL VERT	= MISE À LA TERRE

* SEULEMENT POUR 0-10V DIMMING, SINON COUVRIR LES FILS

3- AJUSTER LE CÂBLE À L'AIDE DU SERRE CÂBLE [C]. RESERRER LA VIS POUR SÉCURISER LE LUMINAIRE. COUPER L'EXCÉDENT.

4- FAIRE LES CONNEXIONS:

FIL VERT	= MISE À TERRE
INDIRECT: FIL BLEU	= FIL BLEU (-)
INDIRECT: FIL ROUGE	= FIL ROUGE (+)

5- DÉTACHER LA PLAQUE DE MONTAGE DE L'AILETTE ET LA FIXER AU VIS À L'AIDE DES DEUX TROUS DE SERRURE, RESSERER LES VIS.

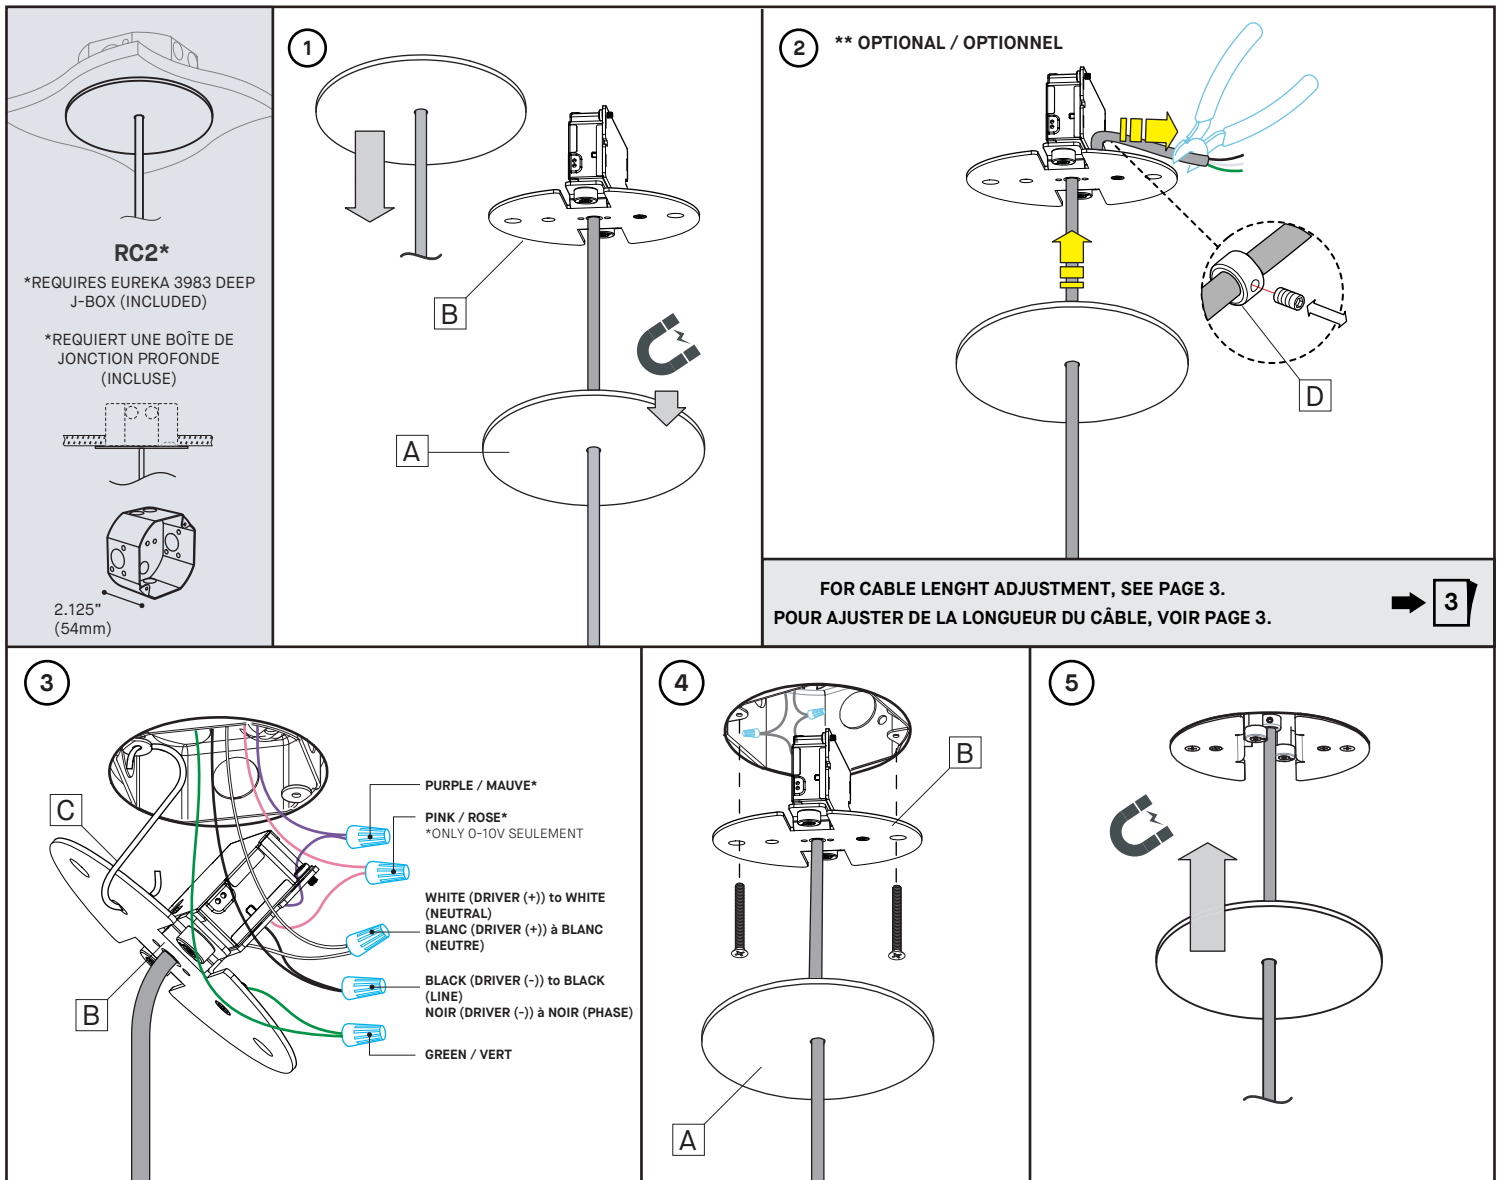
6- LEVER LE PAVILLON EN POSITION



INSTALLATION

FIGURE 4150

RC2 - DEEP JUNCTION BOX MOUNTING / BOÎTE DE JONCTION PROFONDE



INSTALLATION

- 1- REMOVE THE MAGNETIC PLATE [A] FROM THE ANCHOR PLATE [B];
- 2- ** OPTIONAL: ADJUST THE CABLE USING THE STRAIN RELIEF [D], THEN RETIGHTEN THE SCREW TO SECURE THE LUMINAIRE.
IF NECESSARY TO CUT OFF EXCESS BRAIDED CABLE, DISCONNECT DRIVER RED WIRE (+) & DRIVER BLUE WIRE (-) AND FOLLOW STRIPPING STEPS ON PAGE 3. THEN, RECONNECT THE CONNECTIONS.

DRIVER RED WIRE (+)	= LUMINAIRE GREEN WIRE (+)
DRIVER BLUE WIRE (-)	= LUMINAIRE BLACK WIRE (-)
(WDIM) CONTROLER WHITE WIRE (COOL -)	= LUMINAIRE WHITE WIRE (-)
- 3- HANG THE CANOPY ON HOOK [C], ENSURE IT IS SECURELY ATTACHED, THEN MAKE THE CONNECTIONS:

DRIVER BLACK WIRE (-)	= BLACK WIRE (LINE)
DRIVER WHITE WIRE (+)	= WHITE WIRE (NEUTRAL)
GROUND GREEN WIRE	= GREEN WIRE
*PURPLE WIRE (0-10V DIM +)	= PURPLE WIRE
*PINK WIRE (0-10V DIM -)	= PINK WIRE
*ONLY FOR 0-10V DIMMING, OTHERWISE CAP WIRES.	
- 4- SECURE THE MOUNTING PLATE TO THE JUNCTION BOX USING THE TWO PROVIDED SCREWS. MAKE SURE ALL WIRES GOES INSIDE THE JBOX.
- 5- REPLACE THE MAGNETIC PLATE [A].

INSTALLATION

- 1- RETIRER LA PLAQUE AIMANTÉE [A] DE LA PLAQUE DE MONTAGE [B].
- 2- ** OPTIONNEL: AJUSTER LE CÂBLE À L'AIDE DU SERRE-CÂBLE [D], PUIS RESSERRER LA VIS AFIN DE SÉCURISER LE LUMINAIRE.
SI BESOIN DE COUPER DE L'EXCÉDENT DE CÂBLE TRESSÉ, DÉCONNECTER LE FIL ROUGE (+) AINSI QUE LE FIL BLEU (-) DE L'UNITÉ D'ALIMENTATION, AVANT DE COUPER L'EXCÉDENT DE CÂBLE EN SUIVANT LES ÉTAPES DE DÉNUDAGE INDICUÉES À LA PAGE 3, PUIS RECONNECTER LES FILS:

FIL ROUGE DU PILOTE (+)	= FIL BLANC DU LUMINAIRE (+)
FIL BLEU DU PILOTE (-)	= FIL NOIR DU LUMINAIRE (-)
(WDIM) FIL BLANC DU CONTRÔLEUR	= FIL BLANC DU LUMINAIRE (-)
- 3- SUSPENDRE LE PAVILLON AU CROCHET [C], S'ASSURER QU'IL EST BIEN ACCROCHÉ, PUIS EFFECTUER LES CONNEXIONS:

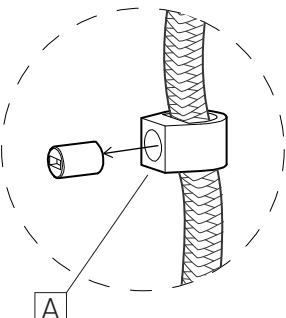
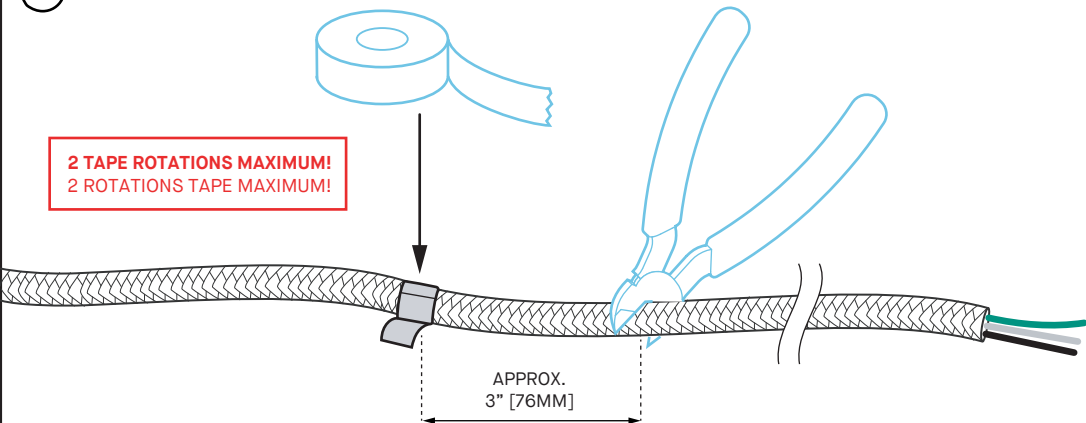

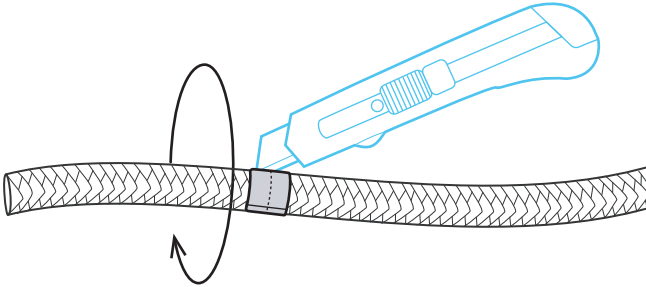
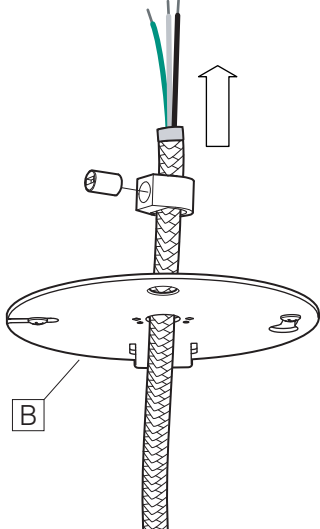
FIL NOIR DU PILOTE (-)	= FIL NOIR (PHASE)
FIL BLANC DU PILOTE (+)	= FIL BLANC (NEUTRE)
FIL VERT GROUND	= FIL VERT
*FIL MAUVE (0-10V DIM +)	= FIL MAUVE
*FIL ROSE (0-10V DIM -)	= FIL ROSE
*SEULEMENT POUR GRADATEUR 0-10V, SINON COUVRIR LES FILS.	
- 4- FIXER LA PLAQUE DE MONTAGE [B] À LA BOÎTE DE JONCTION À L'AIDE DES DEUX VIS FOURNIES. BIEN RENTRER LES FILS DANS LE BOITE DE JONCTION.
- 5- REMETTRE EN PLACE LA PLAQUE AIMANTÉE [A].

TEXTILE POWER CABLE STRIPPING STEPS

ÉTAPES DE DÉGAINAGE POUR CÂBLE EN TISSU

NOTE: STEPS FOR ON SITE ADJUSTMENT OF TEXTILE THREADED CABLE LENGTH

NOTE: LES INSTRUCTIONS QUI SUIVENT SONT POUR L'AJUSTEMENT DE LONGUEUR DE CÂBLE EN TISSU TRESSÉ SUR PLACE

①  A	②  2 TAPE ROTATIONS MAXIMUM! 2 ROTATIONS TAPE MAXIMUM! APPROX. 3" [76MM]	
FOR STEP 3 / POUR L'ÉTAPE 3:  SUGGESTED TOOL: ROUND CABLE STRIPPER (OR USE UTILITY KNIFE) OUTIL SUGGÉRÉ POUR DÉGAINER (OU UTILISER UN COUTEAU UTILITAIRE)	③  CAREFUL NOT TO CUT THE WIRES ATTENTION DE NE PAS COUPER LES FILS	④  B

INSTALLATION

- 1- IF NECESSARY, UNSCREW STRAIN RELIEF [A] AND REMOVE THE CABLE FROM THE MOUNTING PLATE.
- 2- WRAP A LAYER OF ELECTRICAL TAPE AROUND THE STRIPPING SECTION (APPROXIMATIVE DISTANCE OF 3 INCHES).
⚠️ WRAP NO MORE THAN 2 ROTATIONS FOR CABLE TO FIT IN THE STRAIN RELIEF. CUT THE CABLE TO DESIRED LENGTH.
- 3- PLACE THE CABLE ON A HARD SURFACE AND CUT ALL THE WAY ROUND ON THE TAPED SECTION WITH A KNIFE BLADE OR OTHER STRIPPING TOOL (NOT INCLUDED).
REMOVE THE CABLE SLEEVE AND STRIP THE WIRES.
⚠️ CAREFUL NOT TO CUT THE WIRES.
- 4- IF NECESSARY, REASSEMBLE THE CABLE TO THE MOUNTING PLATE [B] WITH THE STRAIN RELIEF.

INSTALLATION

- 1- SI NÉCESSAIRE, DÉVISSEZ LE SERRE CÂBLE [A] ET RETIRER LE CÂBLE DE LA PLAQUE DE MONTAGE.
- 2- ENVELOPPEZ LE CÂBLE DE RUBAN ADHÉSIF ÉLECTRIQUE AUTOUR DE LA SECTION DE DÉGAINAGE (DISTANCE D'ENVIRON 3 PO [76MM]).
⚠️ ENVELOPPEZ UN MAXIMUM DE 2 TOURS AFIN DE POUVOIR INSÉRER LE CÂBLE DANS LE SERRE-CÂBLE. COUPEZ LE CÂBLE À LA LONGUEUR DÉSIRÉE.
- 3- PLACEZ LE CÂBLE SUR UNE SURFACE DURE ET COUPEZ LA GAINÉ TOUT LE TOUR DE LA SECTION AVEC LE RUBAN À L'AIDE D'UN COUTEAU OU D'UN OUTIL DE DÉGAINAGE (NON-INCLU).
RETIREZ LA GAINÉ ET DÉNUDEZ LES FILS.
⚠️ ATTENTION DE NE PAS COUPER LES FILS.
- 4- SI NÉCESSAIRE, RÉASSEMBLEZ LE CÂBLE À LA PLAQUE DE MONTAGE [B] À L'AIDE DU SERRE CÂBLE.