


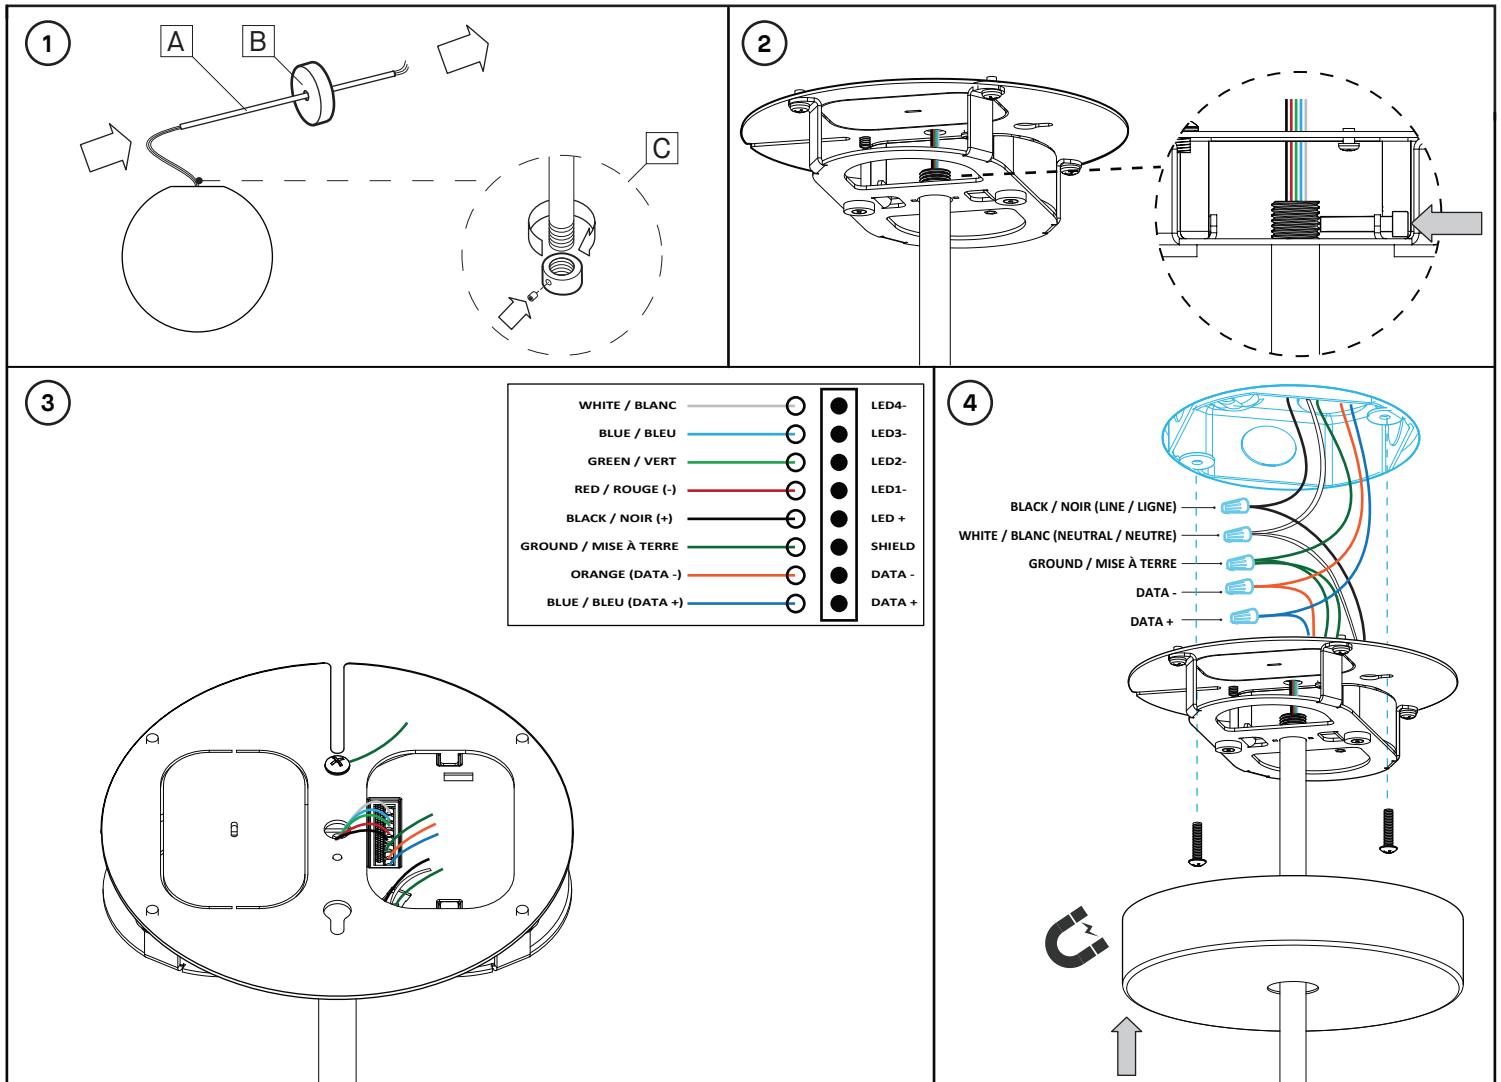

INSTALLATION

1- INSERT THE CABLES IN THE HOLLOW STEM [A]. MAKE SURE THE STEM IS PASSING THROUGH THE CANOPY [B] THEN INSERT THE STEM ON THE COUPLING [C] LOCATED AT THE TOP OF THE FIXTURE. LOCK DOWN THE STEM WITH THE SET SCREW USING A HEX KEY

2- MAKE THE CONNECTIONS BY FOLLOWING THE TABLE.

3- MAKE CONNECTIONS:

4- MAKE CONNECTIONS:

BLACK WIRE (LINE)	= BLACK WIRE
WHITE WIRE (NEUTRAL)	= WHITE WIRE
GREEN WIRE	= GROUND (GREEN)
DATA -	= DATA -
DATA +	= DATA +

FIX THE MOUNTING PLATE INTO THE JUNCTION BOX WITH TWO ADEQUATE SCREWS. REPLACE THE MAGNETIC CANOPY COVER.

INSTALLATION

1- INSÉRER LES CÂBLES DANS LA TIGE [A]. S'ASSURER QUE LA TIGE PASSE AU TRAVERS LE PAVILLON [B], PUIS INSÉRER LA TIGE DANS LE RACCORD [C] SITUÉ SUR LE DESSUS DU LUMINAIRE. BARRER LA TIGE AVEC LA VIS DE SERRAGE À L'AIDE D'UNE CLÉ ALLEN


2- FAIRE LES CONNEXIONS EN SUIVANT LE TABLEAU.

3- FAIRE LES CONNEXIONS EN SUIVANT LE TABLEAU.

4- EFFECTUER LES CONNEXIONS :

FIL NOIR (LIGNE)	= FILS NOIR
FIL BLANC (NEUTRE)	= FILS BLANC
FIL VERT	= MISE À LA TERRE
DATA -	= DATA -
DATA +	= DATA +

FIXER LA PLAQUE DE MONTAGE À LA BOÎTE DE JONCTION À L'AIDE DE DEUX VIS. REMETTRE EN PLACE LE CACHE DE PAVILLON MAGNÉTIQUE.

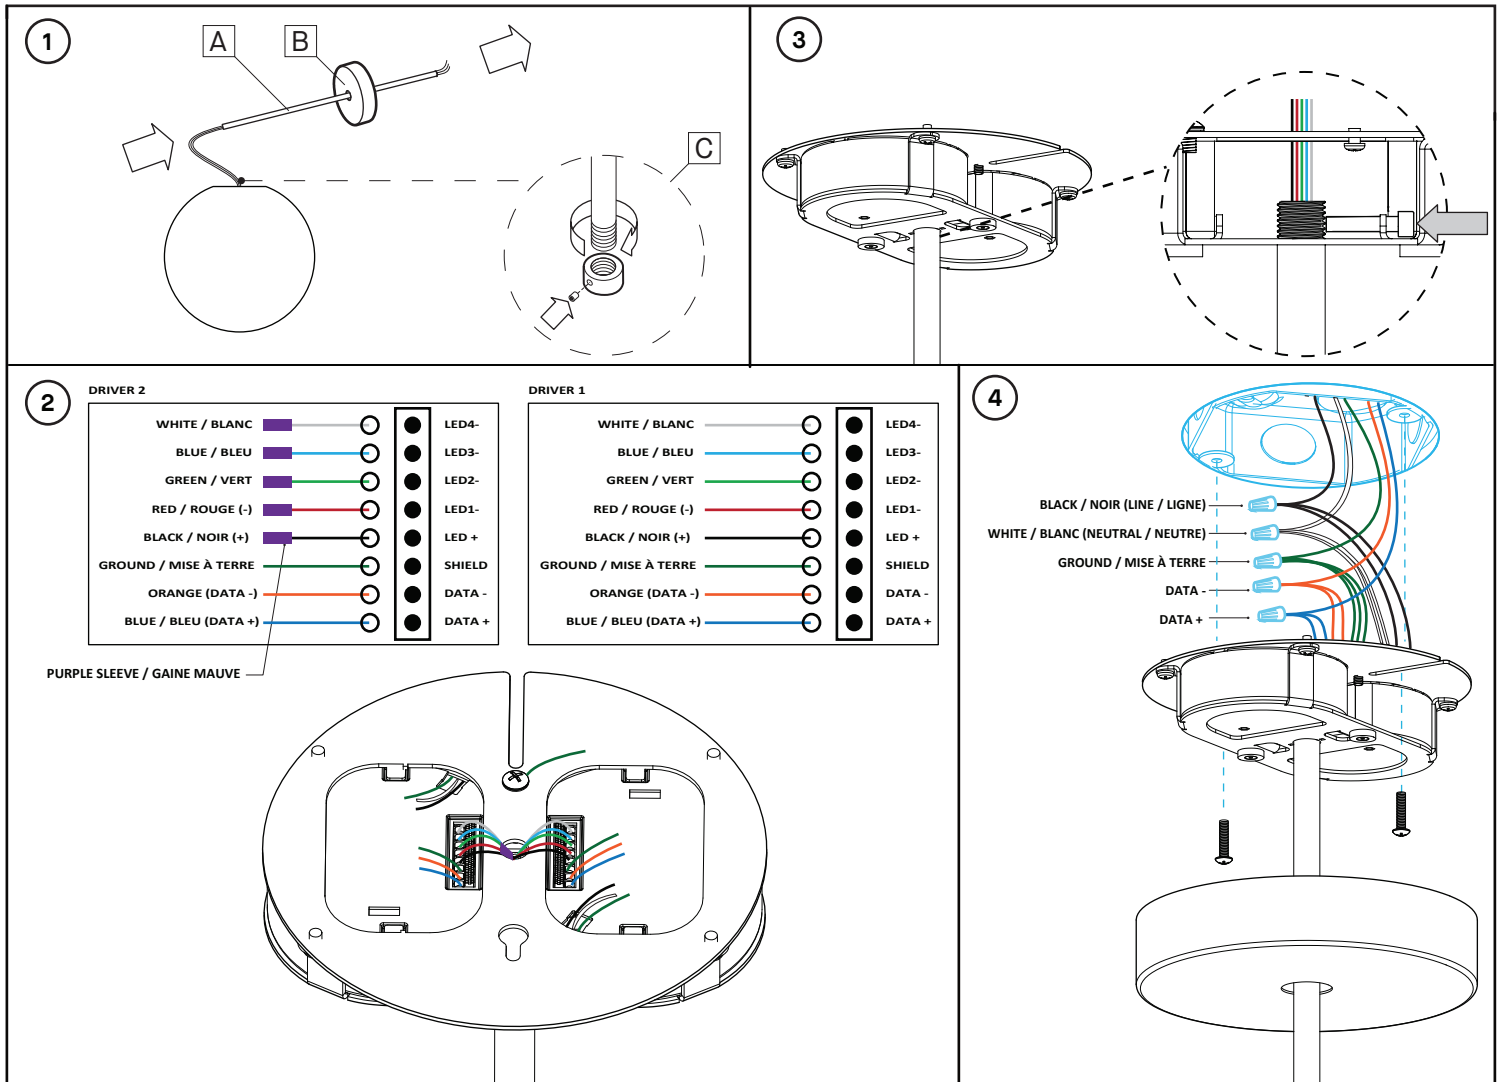

INSTALLATION

1- INSERT THE CABLES IN THE HOLLOW STEM [A]. MAKE SURE THE STEM IS PASSING THROUGH THE CANOPY [B] THEN INSERT THE STEM ON THE COUPLING [C] LOCATED AT THE TOP OF THE FIXTURE. LOCK DOWN THE STEM WITH THE SET SCREW USING A HEX KEY

2- MAKE THE CONNECTIONS BY FOLLOWING THE TABLE.

3- MAKE CONNECTIONS:

4- MAKE CONNECTIONS:

BLACK WIRE (LINE)	= BLACK WIRE
WHITE WIRE (NEUTRAL)	= WHITE WIRE
GREEN WIRE	= GROUND (GREEN)
DATA -	= DATA -
DATA +	= DATA +

FIX THE MOUNTING PLATE INTO THE JUNCTION BOX WITH TWO ADEQUATE SCREWS. REPLACE THE MAGNETIC CANOPY COVER.

INSTALLATION

1- INSÉRER LES CÂBLES DANS LA TIGE [A]. S'ASSURER QUE LA TIGE PASSE AU TRAVERS LE PAVILLON [B], PUIS INSÉRER LA TIGE DANS LE RACCORD [C] SITUÉ SUR LE DESSUS DU LUMINAIRE. BARRER LA TIGE AVEC LA VIS DE SERRAGE À L'AIDE D'UNE CLÉ ALLEN

2- FAIRE LES CONNEXIONS EN SUIVANT LE TABLEAU.

3- FAIRE LES CONNEXIONS EN SUIVANT LE TABLEAU.

4- EFFECTUER LES CONNEXIONS :

FIL NOIR (LIGNE)	= FILS NOIR
FIL BLANC (NEUTRE)	= FILS BLANC
FIL VERT	= MISE À LA TERRE
DATA -	= DATA -
DATA +	= DATA +

FIXER LA PLAQUE DE MONTAGE À LA BOÎTE DE JONCTION À L'AIDE DE DEUX VIS. REMETTRE EN PLACE LE CACHE DE PAVILLON MAGNÉTIQUE.