


# VERNER 4273-14

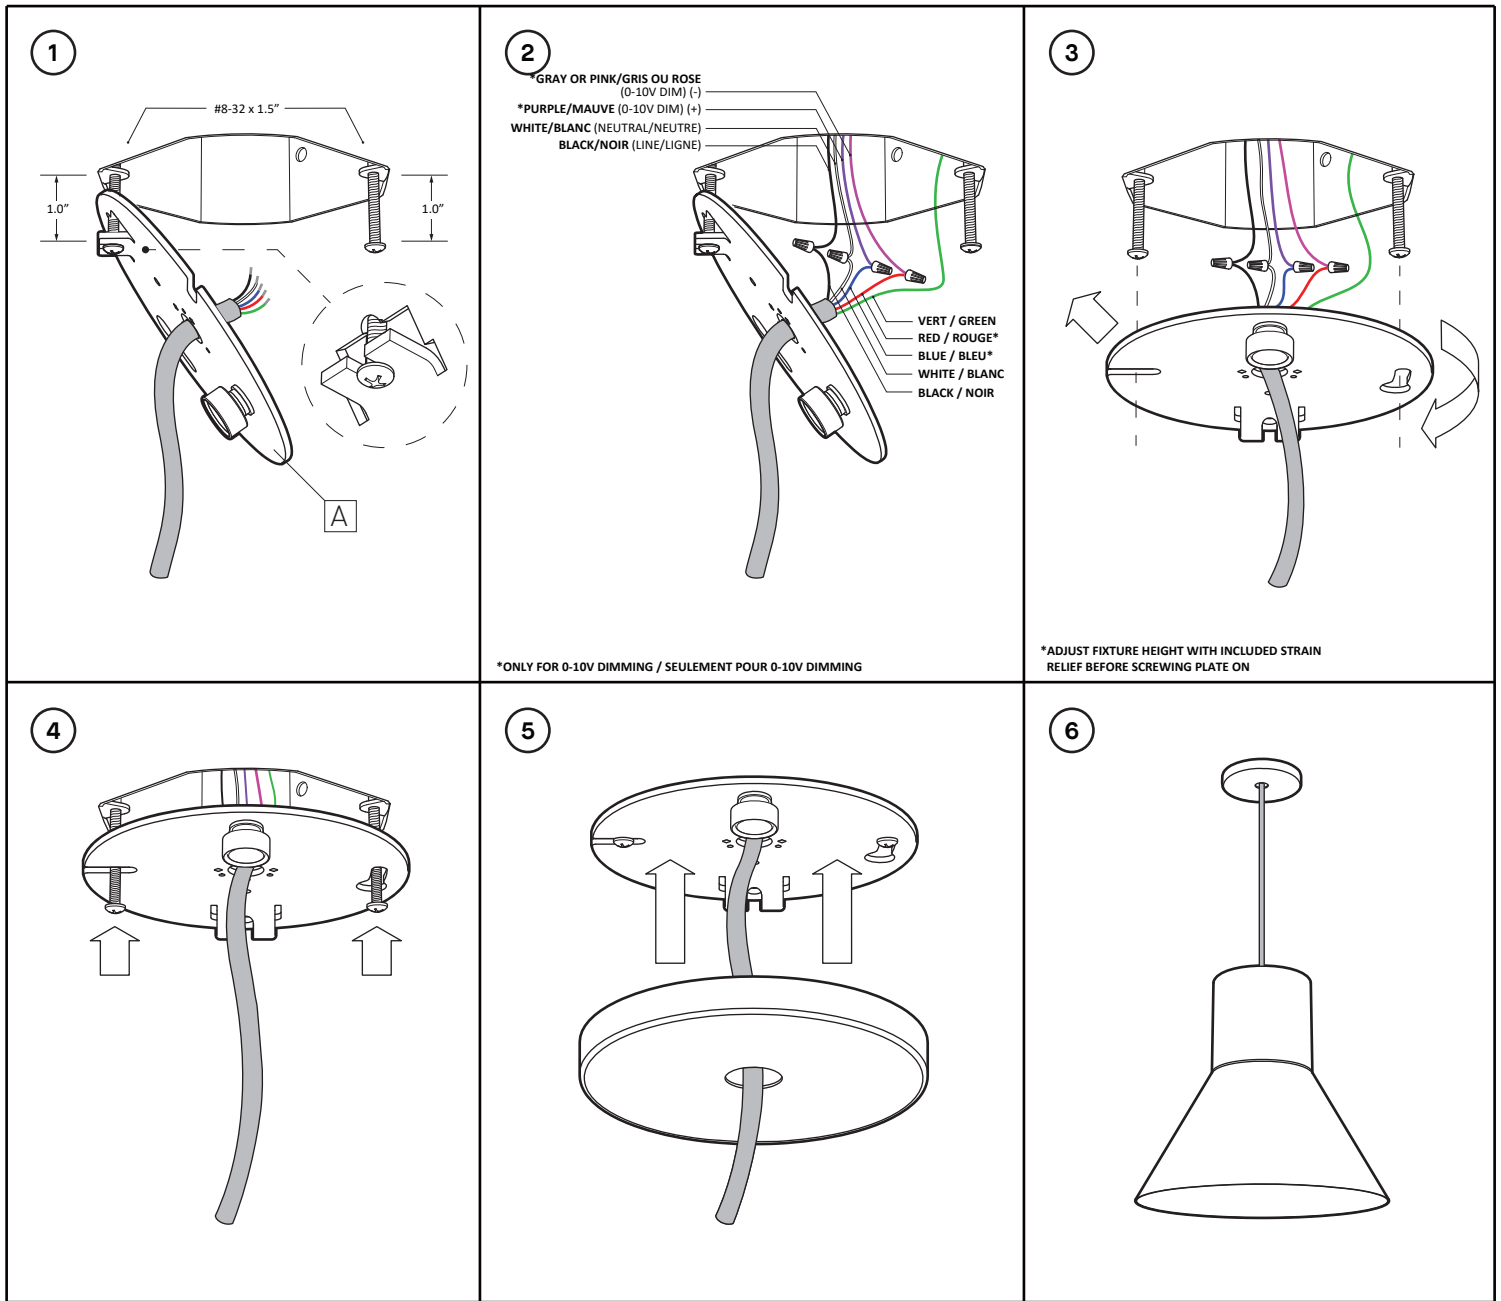

## INSTALLATION

1- INSERT BOTH #8-32 SCREWS LEAVING A 1.0" DISTANCE BETWEEN THE SCREW HEAD AND THE JUNCTION BOX. HANG THE MOUNTING PLATE [A] ON ONE OF THE SCREW HEADS USING THE SLOT IN THE FOLDED FLAP

2- MAKE CONNECTIONS:

\*PURPLE WIRE (0-10V DIM +) = BLUE WIRE  
 \*GRAY OR PINK WIRE (0-10V DIM -) = RED WIRE  
 BLACK WIRE (LINE) = BLACK WIRE  
 WHITE WIRE (NEUTRAL) = WHITE WIRE  
 GREEN WIRE = GROUND

\* ONLY FOR 0-10V DIMMING

3- DETACH MOUNTING PLATE FROM FOLDED FLAP AND FIX IN PLACE USING THE TWO KEYHOLE SLOTS

4- TIGHTEN DOWN SCREWS

5- LIFT CANOPY INTO POSITION

nLight AIR - SCREW THE ANTENNA ON ITS BASE ON TOP OF THE FIXTURE.

## INSTALLATION

1- INSÉRER LES DEUX VIS #8-32 EN LAISSANT UN ESPACE DE 1.0" ENTRE LES TÊTES DE VIS ET LA BOÎTE DE JONCTION. SUSPENDRE LA PLAQUE DE MONTAGE [A] SUR L'UNE DES VIS EN UTILISANT L'OUVERTURE DE L'AILETTE

2- FAIRE LES CONNEXIONS:

\*FIL MAUVE (0-10V DIM +) = FIL BLEU  
 \*FIL GRIS OU ROSE (0-10V DIM -) = FIL ROUGE  
 FIL NOIR (PHASE) = FIL NOIR  
 FIL BLANC (NEUTRE) = FIL BLANC  
 FIL VERT = MISE À TERRE

\* SEULEMENT POUR 0-10V DIMMING

3- DÉTACHER LA PLAQUE DE MONTAGE DE L'AILETTE ET LA FIXER AUX VIS À L'AIDE DES DEUX TROUS DE SERRURE

4- RESSÉRER LES VIS

5- LEVER LE PAVILLON EN POSITION

nLight AIR - VISSER L'ANTENNE SUR SA BASE SUR LE DESSUS DU PRODUIT.



## INSTALLATION